

Scroll Engage

by **Storage Options**

8" TABLET PC

ANDROID™ 4.0 ICS

HIGH RESOLUTION XGA SCREEN



ANDROID™ 4.0 INSIDE

Instruction Manual

**CAUTION**

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



**TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE THE COVER.**

NO USER SERVICABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT
EXPOSE THIS UNIT TO RAIN OR MOISTURE**

CAUTION:

**TO PREVENT ELECTRIC SHOCK, ENSURE THE PLUG
IS FULLY INSERTED INTO A MAINS SOCKET**

IMPORTANT SAFEGUARD



All lead-free products offered by the company comply with the requirements of the European law of the Restriction of Hazardous Substances (RoHS) directive, which means our manufacturing processes and products are strictly “lead-free” and without the hazardous substances cited in the directive.



The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product’s end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste. Contact your local dealer for procedures for recycling this equipment.

DISCLAIMER

We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. The content of this manual is subject to change without notice.

Screenshots are for illustration purposes only and may not be representative of the actual product.

RECOMMENDATIONS

- **AVOID DUSTY LOCATIONS:** Excessive build-up of dust may cause the unit to fail.
- **DO NOT EXPOSE TO MOISTURE:** Exposing the unit to water poses high risk of electric shock.
- **DO NOT DROP:** Doing so could damage internal components.
- **DO NOT OPEN CHASSIS:** No user-serviceable parts inside.

TRADEMARK ACKNOWLEDGEMENTS

- Android™ is a trademark of Google.
- Microsoft & Windows are registered trademarks of Microsoft Corporation.
- All applications copyright © their respective owners.

WARRANTY AND TECHNICAL SUPPORT

To help you make the most of this product you’ll find a host of information including full product manuals, FAQ, troubleshooting guides and a support service if you have specific questions, available at our support website: www.storageoptions.com/support.

This product is also backed by a 12 month warranty in the unlikely event of something going wrong. More information and warranty registration is available at www.storageoptions.com/warranty.



storageoptions.com/support/



support@storageoptions.com

TABLE OF CONTENTS

QUICK START GUIDE	6
OVERVIEW	6
CONVENTIONS USED IN THIS MANUAL	7
PURPOSE OF THIS MANUAL	7
PACKAGE CONTENTS	7
BASIC OPERATION	8
6.1 – Buttons & Connections	8
6.2 – Power On / Off	9
6.3 – Using The Touch Screen	9
6.4 – Unlock The Screen	9
6.5 – Camera Shortcut	9
CHARGE THE BATTERY	10
HOME SCREEN	11
DISPLAY ORIENTATION	12
SETTINGS MENU	13
NETWORK CONNECTIVITY	14
11.1 – Connect To A Wireless Access Point	14
11.2 – Connect To A 3G Network	15
APPLICATIONS	16
12.1 – The Applications Menu	16
12.2 – Applications & Widgets	17
12.3 – Pre-Installed Applications	17
12.4 – Pre-Installed Widgets	17
12.5 – Pre-Loaded Applications	18
12.6 – SlideMe Marketplace	18
12.7 – Add More Applications	18
12.8 – Add A Shortcut To The Desktop	19
12.9 – Remove A Shortcut From The Desktop	19
12.10 – Uninstall Applications	19

TABLE OF CONTENTS (CONTINUED)

WEB BROWSER	20
VIDEO PLAYBACK	21
14.1 – Playback On Scroll	21
14.2 – Play 3D Content On Your HDTV	22
7DIGITAL MUSIC SERVICE	23
WILD TANGENT GAMES SERVICE	24
BUILT-IN CAMERAS	25
MEMORY EXPANSION WITH MICRO SD CARD	26
CONNECT TO A COMPUTER	27
SYSTEM RESET	28
PRODUCT SPECIFICATION	29
WARRANTY AND PRODUCT SUPPORT	30



QUICK START GUIDE

Please follow this quick start checklist to guide you through using your Storage Options Scroll Engage:

1. Check the package contents.
See section “*Package Contents*” (page 7) for more details.
2. Charge the battery.
See section “*Charge The Battery*” (page 10) for more details.
3. Remove the protective film.
Peel the protective film off the tablet’s screen.
4. Familiarise yourself with the physical buttons and connections, powering on, and touch screen control.
See section “*Basic Operation*” (page 8) for more details.
5. Connect to a wireless network for web browsing.
See section “*Network Connectivity*” (page 14) for more details.
6. Familiarise yourself with the included applications.
See section “*Applications*” (page 16) for more details.

OVERVIEW

Scroll Engage is a capacitive touch-screen Android™ 4.0 tablet. Portable, with a highly responsive 8” XGA screen, the slim and stylish design is supported by powerful hardware making the Scroll Engage ideal for gaming, internet use, videos and many more applications.

As a powerful media player the Scroll Engage can support rich, Flash based content, all major video and eBook formats, 3D gaming and much more. The sleek, lightweight design is perfect for use on the move and with a 1024 x 768 high resolution XGA screen you can view your content anywhere in high quality. When at home use HDMI to connect with your 3D or HD TV or monitor, to enjoy stunning 3D and 1080p HD content on the big screen via your Scroll Engage.

With a powerful Cortex A8 1.2GHz processor, Mali-400 dual core graphics processor and 1GB RAM the Scroll Engage is capable of handling a wide range of applications with ease. An extensive 8GB of built in memory, front and rear cameras and up to eight hours of use with the long life battery complete this impressive package.



- Powered by Android 4.0 (Ice Cream Sandwich)
- Intuitive 8” XGA Multi-touch, Capacitive Screen
- Fast Hardware Cortex A8 1.2 GHz, Mali-400 Dual Core Graphics Processor
- Limitless Possibilities Web, Games, E-Books, Video and More
- Flash Support for a Richer Online Experience
- Smart, sleek high resolution 8” screen

CONVENTIONS USED IN THIS MANUAL

At various points in this manual you will see highlighted text. Please refer here for an explanation:

NOTE Important notes are highlighted in blue.

TIP Tips on best practice are highlighted in green.

CAUTION Important cautions and warnings are highlighted in red.

PURPOSE OF THIS MANUAL

This manual is intended to give you a quick overview of the Scroll Engage hardware and very basic functionality of the Android™ 4.0 operating system. It does *not* feature in-depth instructions for Android™ 4.0. The applications are provided “as-is” as a bonus for Storage Options customers. Please contact application developers directly for help and information on their software.

For more detailed information and instructions on the Android™ 4.0 operating system, please visit:

- <http://www.android.com/>

Google is also an excellent resource for help with the Android™ operating system.

- <http://www.google.co.uk/>

PACKAGE CONTENTS

Check the package contents against this checklist. If anything is missing or damaged, please do not use the system, and inform your supplier as soon as possible.

☐ Scroll Engage

☐ Mains adapter

☐ Micro USB cable

☐ Micro On-The-Go (OTG) cable

☐ Earphones

☐ Instruction manual

BASIC OPERATION

The Scroll Engage has five physical buttons. Most other control is performed via the touch screen.

6.1 – BUTTONS & CONNECTIONS



PHYSICAL BUTTON	LABEL	USAGE	DESCRIPTION
Power		Hold	Hold to power on / off the tablet
Escape		Short press	Moves back one step to the previous menu / page
Dual Function: Home / Volume -	-	Short press	Decreases volume
		Hold	Acts as a physical "Home" button to return directly to the Android desktop
Dual Function: Menu / Volume +	+	Short press	Increases volume
		Hold	Acts as a physical "Menu" button

ON-SCREEN BUTTON	ICON	DESCRIPTION
Return		Moves back one step to the previous menu / page
Home		Returns immediately to the Android desktop
Menu		Displays a menu of recently opened applications

CONNECTION	ICON	DESCRIPTION
Earphone		Connect earphones to this standard 3.5mm jack socket
Micro USB		Connect to your computer via USB cable & Connect peripheral devices (e.g. keyboard, USB flash drive)
Mini HDMI		Connect to your HDTV via HDMI cable
DC 5V		Recharge Scroll Engage's battery using the supplied mains adapter
Reset		Reset Scroll Engage to factory settings
Micro SD		Insert a Micro SD card (up to 32GB)

6.2 – POWER ON / OFF



Press and hold the  button until the tablet switches on. It will boot into the Android™ 4.0 operating system. This will take approximately one minute.


To turn the tablet off, press and hold the  button for approximately 3 seconds. A “Power Off” menu will appear on screen. Choose “OK” to complete shutdown or “Cancel” to resume use.

6.3 – USING THE TOUCH SCREEN

Scroll Engage features a capacitive touch screen. To use it, simply touch any area on the screen – no pressure is required. Touch (A) an option to select it.

You can also “touch and drag” (B) to move items or scroll through lists by touching and holding, then gliding your finger over the screen.

Use a finger and thumb to “pinch zoom” (C) on-screen items such as photographs and web pages.

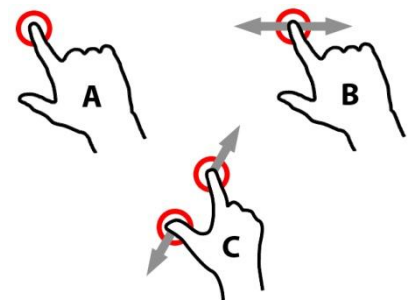


6.4 – UNLOCK THE SCREEN

Scroll Engage operates in a similar manner to a touch-screen mobile phone. When it is first powered on, the Android™ operating system will boot, then you will be presented with a locked screen.

To unlock the screen:

1. If the screen is currently blank (Scroll Engage is powered on but in standby), press the  button (short press, do not hold). The screen will turn on.
2. Touch and drag the padlock icon over to the open padlock symbol on the right side of the screen.

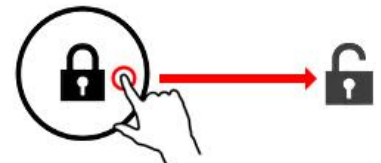


To lock the screen:

1. Press the  button (short press, do not hold).
2. The screen will go blank to conserve battery power.

6.5 – CAMERA SHORTCUT

From the locked screen, you can also unlock and go straight to the built-in Camera application by dragging the padlock over to the camera icon.



TIP

If the tablet is not used for approximately one minute, it will go to sleep to prolong battery life. This setting can be changed in “Settings” → “Display” → “Sleep”.

CHARGE THE BATTERY

It is recommended to fully charge Scroll Engage overnight before first use. This will help prolong the useful life of the built-in battery.

To charge the battery:


- Insert the mains charger plug into the 5V DC socket (located to the left of the HDMI socket) on Scroll Engage. Connect the mains adapter to a UK 3-pin electrical socket.



CAUTION

Do not use any mains adapter other than the one supplied. Using an incompatible adapter could damage the tablet and poses the potential risk of fire.


- If Scroll Engage is powered off, it will charge until the battery is full.
- If Scroll Engage is powered on, the battery charge status will be indicated on screen by the battery meter:

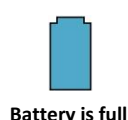

- When Scroll Engage is connected to a computer via USB cable, it will “trickle charge”; the battery will charge via the USB socket, but at a much slower rate than via the DC 5V mains adapter.

HOME SCREEN

The Home screen will look similar to the picture below. It is actually five screens, each of which can have a different layout of icons. To switch between screens, simply slide your finger left or right across the display. The status bar and navigation buttons are always visible, no matter which Home screen you are currently viewing.

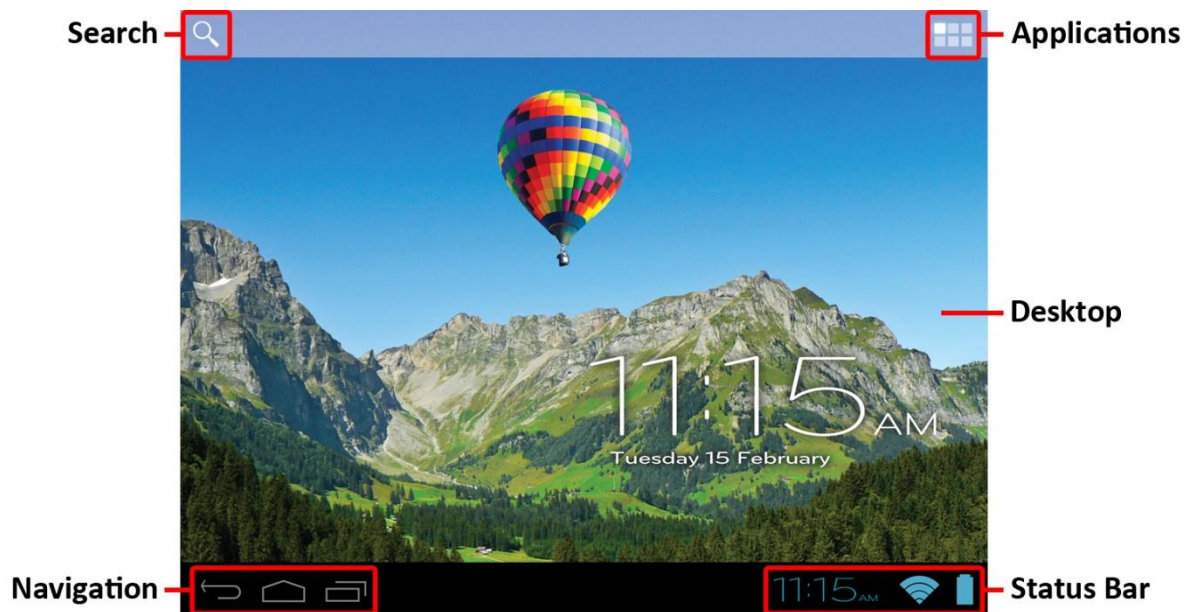

- The Desktop can contain shortcuts to your most-used applications and widgets.
- Touch the Search icon to quickly search the World Wide Web using Google.
- The  icon will launch the Applications menu.
- The status bar displays system information, such as current time, wireless connectivity and battery level. Touch to expand the status bar for more detailed information.
- The  button moves back one step to the previous menu / page.
- The  button returns immediately to the Android desktop.
- The  button displays a menu of recently opened applications.

DISPLAY ORIENTATION

Scroll Engage features a built-in G-Sensor which monitors the tablet's current orientation and automatically adjusts the display to match.



To re-orientate the display:

- Simply turn Scroll Engage to portrait or landscape position, and the display will rotate to match.

NOTE

Some applications will lock screen orientation. Normal rotation functionality will resume once the application is closed.

Automatic screen rotation can be switched off, which is useful if you would prefer to use Scroll Engage exclusively in landscape mode.

To switch off automatic rotation:

1. From the Home Screen, touch the  icon (located at the top right) to open the Applications menu.
2. Touch the "Settings" icon.
3. Select "Display".
4. Touch "Auto-rotate screen" to remove the tick from the checkbox. Scroll Engage will be locked into landscape mode.

To switch automatic rotation back on, repeat the above steps and ensure there is a tick in the checkbox in step 4.

SETTINGS MENU

The Settings menu allows you to adjust Scroll Engage's system configuration.

To change settings:

1. Touch the Settings menu icon on the Applications menu. The Settings menu will open.
2. Glide your finger up or down the left side of the screen to scroll through the list of available categories.
3. Touch a category title to view further options on the right side of the screen.



ITEM	ICON	DESCRIPTION
Wi-Fi		Connect to / disconnect from wireless networks, view connection status, etc
Data usage		Enable / disable mobile data, view current usage, set mobile data limit, etc
Sound		Change volume, touch sounds, screen lock sounds, etc
Display		Change brightness, wallpaper, sleep settings, font size, etc
Storage		Manage NAND and Micro SD card, view available capacity, etc
Battery		See battery status and powered-on time
Apps		Manage applications, running services, etc
Accounts & sync		Switch synchronisation on / off, manage accounts, etc
Location services		Change approximate location detection, improve search results
Security		Change screen lock type, encryption, passwords, credential storage, etc
Language & input		Select language, add to the dictionary, edit on-screen keyboard settings, etc
Backup & reset		Backup & restore data, perform factory reset, etc
Date & time		Set date, time zone, time, clock format, etc
Accessibility		Set up large text, auto-rotate screen, speak passwords, etc
Developer options		Advanced functions for Android developers – debugging, HDCP check, etc
About tablet		Information about your Android™ device

Some options will have a simple checkbox, while others will have a list of further settings to choose from. You should take time to become familiar with the options in these categories.

For more detailed information, please visit <http://www.android.com/>.

NETWORK CONNECTIVITY

The vast majority of applications support some kind of networking / Internet functionality. There are two ways to connect to the Internet using Scroll Engage; either through your wireless router (access point) or by plugging in a 3G network dongle.


11.1 – CONNECT TO A WIRELESS ACCESS POINT

Scroll Engage features standard wireless B / G / N capabilities, meaning it can connect to any router which is compatible with the 802.11b/g/n standard. Check your router's documentation to confirm compatibility.

NOTE You will need your router's wireless SSID and password to continue with these instructions.

To enable wireless networking and connect to your router:

1. Go to "Settings" → "Wireless & Networks" → "Wi-Fi" and slide the Wi-Fi switch to the right to enable it.

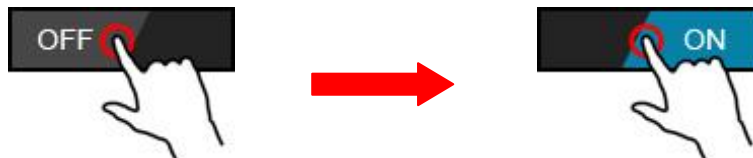

2. After a few seconds, Wi-Fi will be enabled and a list of available wireless network names (SSID) will appear. Locate your wireless network on the list and touch to select it.
3. You will be asked for the password. Type it in using the keyboard which automatically appears on screen.

TIP

If you do not know your wireless password, please refer to your router's instruction manual, or contact your Internet Service Provider (ISP).

4. Touch the "Connect" option to complete setup of your wireless connection.

NOTE Advanced users can touch "Show advanced options" to set up a proxy and / or manual IP configuration.

An icon will be displayed in the status bar to show wireless connection status:



Full signal



Moderate signal



Weak signal

Once you are connected to a wireless network, you can select it on the list, to view connection details (e.g. signal strength, link speed and IP address). You can use the "Forget" option to disconnect from the network and remove the stored password.

11.2 – CONNECT TO A 3G NETWORK

Scroll Engage supports a variety of 3G dongles from various manufacturers. Please see the support list on Scroll Engage:

1. Go to “Settings” → “Wireless & Networks” → “More”.
2. Select “3G Support Information” to display a list of compatible 3G dongles.

To use a 3G dongle, simply connect it to the USB Host port on Scroll Engage. It will automatically dial its Internet connection.



If your 3G dongle has a full-size USB connection, you will need to use the supplied Micro USB On-The-Go (OTG) cable to adapt it for use with Scroll Engage. Plug your 3G dongle into the large socket on the OTG cable, then plug the OTG cable into the USB Host port on Scroll Engage.



Full signal



Moderate signal



Weak signal

NOTE


Unlisted 3G dongles *may* still work with Scroll Engage. To test your own, simply plug it in and see if it connects to the Internet. Unfortunately Storage Options cannot guarantee that your particular 3G dongle will be compatible, and we cannot support equipment from other manufacturers.

APPLICATIONS

Scroll Engage supports a wide variety of applications. A small selection is pre-installed on the tablet and available from the applications menu, but many more can be downloaded from various websites.

12.1 – THE APPLICATIONS MENU

To open the Applications menu, touch the  icon at the top right of the Home screen.

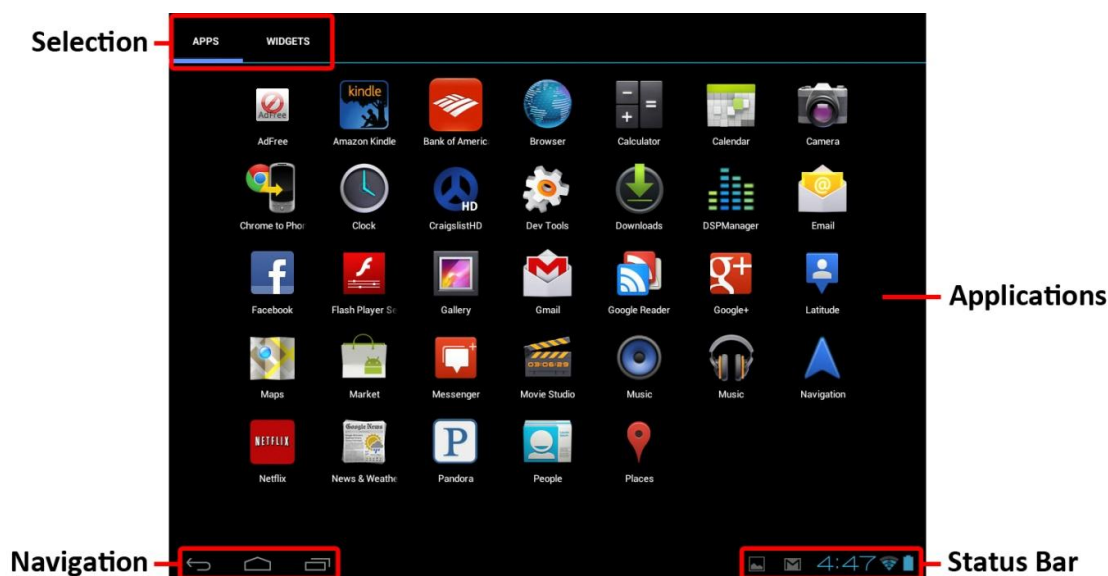

- Use the selection menu to choose between viewing installed applications and widgets.
- If you have more applications than can fit onto one page, slide your finger to the right across the screen to change to the next page.
- The status bar displays system information, such as system time, wireless connectivity and battery level. Touch it to expand and display more detailed information.
- The  button moves back one step to the previous menu / page.
- The  button returns immediately to the Android desktop.
- The  button displays a menu of recently opened applications.

*The above screenshot is for illustration purposes only, and is not representative of the applications included on Scroll.

12.2 – APPLICATIONS & WIDGETS

Applications:


- Applications provide expanded functionality to Scroll Engage. A selection of applications is pre-loaded onto your Scroll Engage tablet, and more can be downloaded from various websites.
- Applications usually take over the full screen when in use. You can use the physical “Home” and “Return” buttons to quit a full-screen application.

Widgets:

- Widgets give enhanced functionality to Scroll Engage’s desktop by providing live updates such as news headlines, e-mail notifications, current time, and more.
- Some widgets are preinstalled, and others are installed along with their application counterparts.

12.3 – PRE-INSTALLED APPLICATIONS

These applications are pre-installed on Scroll Engage:

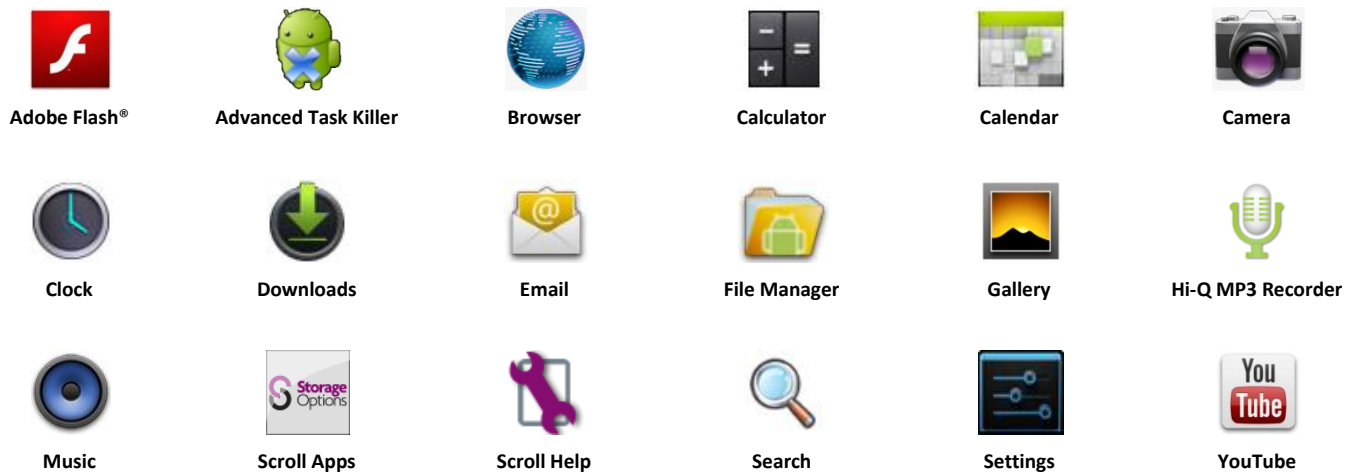

To access and launch the pre-installed applications, touch the  icon on the Home screen to display the Applications menu.

12.4 – PRE-INSTALLED WIDGETS

These widgets are pre-installed on Scroll Engage:

- **Analog clock:** Displays a real time graphical analogue clock on the desktop
- **Bookmark:** Displays a single web page bookmark on the desktop
- **Bookmarks:** Displays multiple web page bookmarks on the desktop in a group
- **Calendar:** Displays upcoming appointments in your calendar
- **Contact:** Add one of your e-mail contacts to the desktop
- **Email:** Shows real time updates to your e-mail inbox

Please see <http://www.android.com> for more information about widgets.

12.5 – PRE-LOADED APPLICATIONS

Scroll Engage has several applications which are pre-loaded onto the internal memory. You will need to install them before you can use them.



To install the preloaded applications:

1. From the applications menu, touch the “Scroll Apps” icon. “Easy Installer” will load and a list of preloaded apps will appear on screen.
2. Touch to place a tick in the check box next to each application you wish to install.
3. Touch the “Install selected apps” button at the bottom of the screen, then follow the onscreen instructions.

These applications are pre-loaded on Scroll Engage:



7digital



Adobe Reader®



Aldiko



Amazon Kindle™



BBC News



Evernote



Facebook



SlideMe Marketplace



TuneIn Radio



Twitter



WildTangent

12.6 – SLIDEME MARKETPLACE

SlideMe Marketplace is pre-loaded onto Scroll Excel. Once you have installed it using the method described above, you can launch the marketplace and browse available applications. For support and further information on SlideMe Marketplace, please visit <http://slideme.org>.



NOTE

Scroll Excel does not support the official Android™ Market.

12.7 – ADD MORE APPLICATIONS

There are thousands of applications available for Android™ from various websites. It is possible to download application (.apk) files on a computer, then transfer them to Scroll Excel using the supplied USB cable. See section “Connect To A Computer” (page 27) for more details.

Here are some recommended websites:

- Opera Mobile Store
- Handango
- Freeware Lovers

<http://mobilestore.opera.com>

<http://www.handango.com>

<http://www.freewarelovers.com>

12.8 – ADD A SHORTCUT TO THE DESKTOP

You can add shortcuts onto the desktop for quick access to your favourite applications. Shortcuts can be placed anywhere on the desktop grid, so you can organise them in whichever manner you like.

To place a shortcut on the desktop:

1. Open the Applications menu by touching the  icon at the top right of the Home screen.
2. Touch and hold your favourite application's icon.
3. The Applications menu will close and you will be returned to the desktop on the Home screen. A faint blue grid will appear which shows you where you can place the shortcut.
4. Drag the shortcut anywhere on the grid, then release it to place it in that position.

TIP

To place a widget on the desktop, you can follow the procedure above, but switch to Widgets on the selection menu after step 1.

12.9 – REMOVE A SHORTCUT FROM THE DESKTOP

If you would like to remove an application shortcut from the desktop, you can do so. To remove a shortcut:

1. Touch and hold the shortcut icon you would like to remove. A message stating “X Remove” will appear at the top of the screen.
2. Drag the icon over this message. Once it turns red, release the icon and the shortcut will be removed.

TIP

You can also use this method to remove widgets from the desktop.

12.10 – UNINSTALL APPLICATIONS

To uninstall an application (i.e. completely remove it from your tablet), follow this procedure:

1. Open the Applications menu and touch the “Settings” icon. 
2. Touch the “Apps” option on the left of the screen, then filter the list that appears by choosing “Downloaded”, “On SD Card”, “Running” or “All”.
3. Touch the application you would like to remove, choose “Uninstall” from the options that appear on screen, then touch the “OK” option to confirm.

WEB BROWSER


Scroll Engage has a built-in browser which can be used to browse the World Wide Web, in the same way you would use a browser on a desktop computer or laptop.

To use the browser:

1. Touch the “Browser” icon on the Applications menu. The browser will open.
2. By default, the browser will automatically load Google.



NOTE Make sure you are connected to your wireless network before opening the browser.

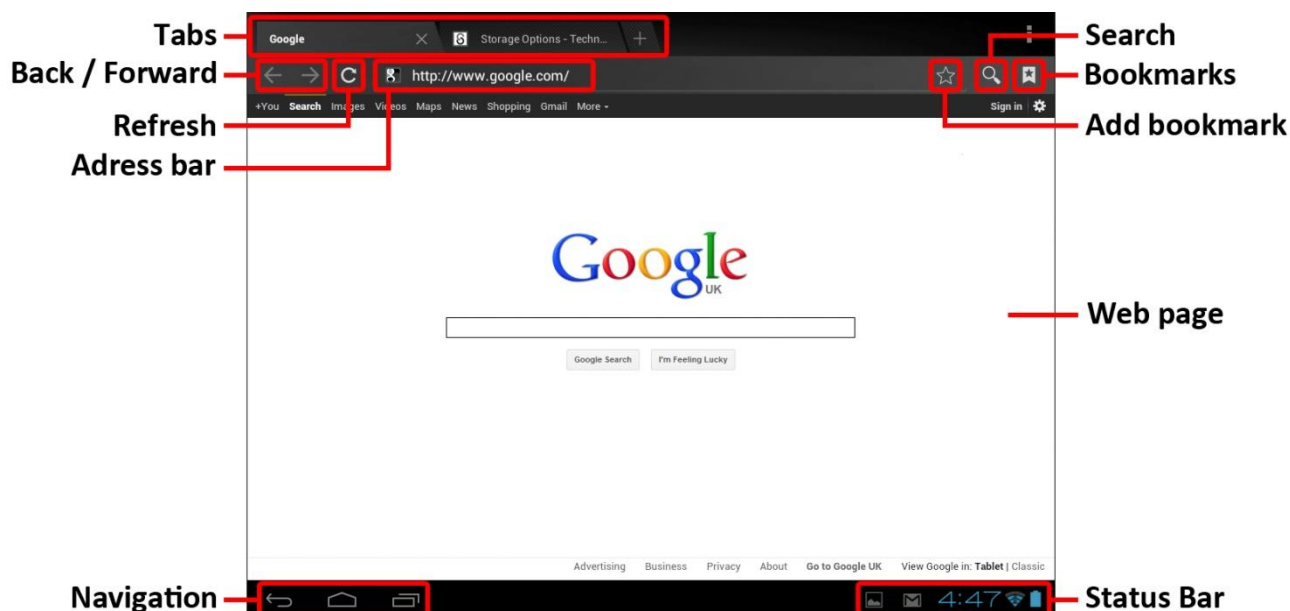

- Use tabs to load multiple websites and switch between them.
- Use the address bar to go directly to a website if you know its address.
- Use ← / → (back / forward) and ↻ (refresh) to navigate pages in the current tab.
- Touch the ☆ icon to bookmark the current page.
- Touch the 📌 icon to select any previously stored favourite websites.
- Touch the 🔍 icon to perform an Internet search.

VIDEO PLAYBACK

Scroll Engage is a powerful portable media player. The “Gallery” application can play video and display photos that are stored on either internal memory or a Micro SD card.

To use the Gallery:

1. Touch the “Gallery” icon on the Applications menu. The Gallery application will open.
2. The Gallery will automatically find your media and arrange it in a thumbnails view. If you have multiple folders, it will show them first. Touch a folder to select it, then you will be shown the media files in that folder.
3. Touch the thumbnail to play the file.




TIP

To view more information about a file (such as duration, size and location), touch and hold its thumbnail, then touch the  button and select “Details”.

14.1 – PLAYBACK ON SCROLL

Video files will play back in full screen mode. For a few seconds during the start of playback, the user interface will be displayed:

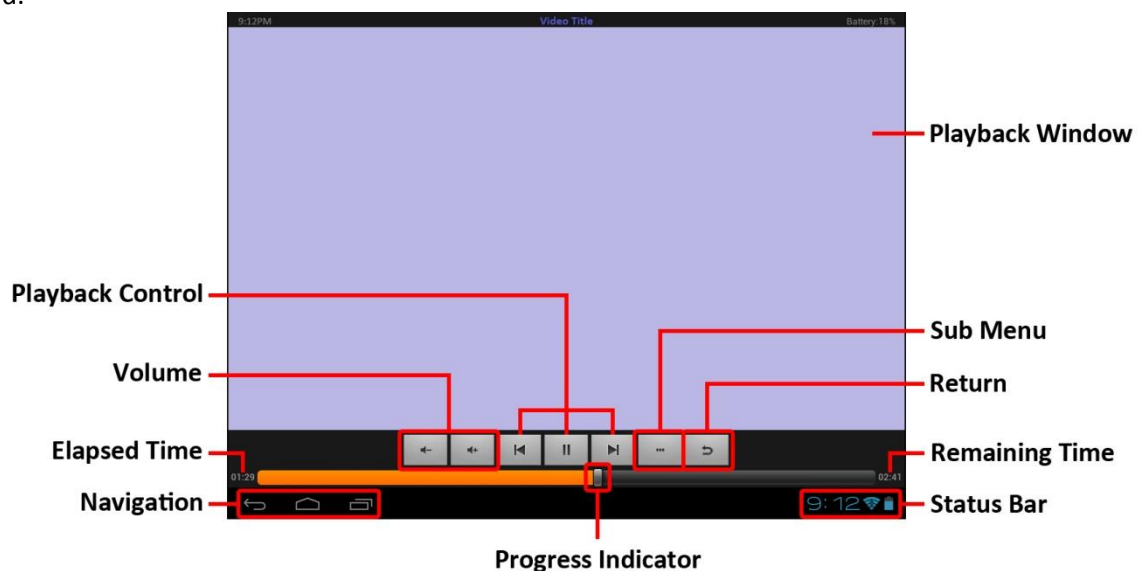

- Use playback control buttons to play / pause or skip backwards / forwards between videos.
- Drag the progress indicator left or right to fast forward or rewind the video.
- The Sub Menu provides further options for subtitles, repeat play, aspect ratio etc.
- Touch the screen to reactivate the controls after they have disappeared from view.

14.2 – PLAY 3D CONTENT ON YOUR HDTV

Scroll Engage can also be connected to your big-screen HDTV for Full HD and 3D video playback.

NOTE You will need a 3D compatible Mini HDMI to HDMI cable to connect to a 3D HDTV.

To connect to your HDTV:

1. Using a Mini HDMI to HDMI cable, plug the Mini HDMI connector into Scroll Engage's Mini HDMI socket, and the full size HDMI plug into your HDTV's HDMI socket.



Mini HDMI

2. Switch to the appropriate input on your HDTV. Refer to your TV's manual for instructions on how to do this.
3. Scroll Engage will automatically detect the HDMI connection and display an image on your TV screen.

Scroll Engage supports 3D video playback on a compatible 3D HDTV. Simply play your 3D video in the same way you would play 2D video, and on your 3D HDTV select the appropriate 3D mode (left/right or top/bottom, see examples below). Refer to your TV's manual for instructions on how to do this.

VIDEO MODE	DISPLAY	TV MODE
Left / Right		L/R
Top / Bottom		T/B

7DIGITAL MUSIC SERVICE

7digital is a digital music content delivery and management application. With over 17 million tracks available in MP3 format from all major labels, 7digital has something for everyone.



The 7digital application is pre-loaded on Scroll Engage. See section “12.5 – Pre-Loaded Applications” (page 18) for instructions on how to install.

To use 7digital:

1. On the Applications menu, touch the 7digital application to launch it.
2. You will be presented with the latest releases and you can swipe across the screen to see more.
3. When you try to purchase music, you will be asked to either create an account, or sign in to your existing account. You can also sign in from the options menu; touch the  button then go to “Settings” → “General” and choose “Sign In”.

There are many functions available in 7digital. Refer to <http://www.7digital.com> for full information. To get started quickly, you should become familiar with these icons:

- Use the  function at the top of the screen to type a search term for your favourite artist.
- Touch  to switch to your local music collection. This can include music purchased from 7digital and / or music stored on your tablet (e.g. on a Micro SD card).

TIP

It is recommended to store your music collection in a folder called “Music” in the root of the card.

- Touch  to switch back to the home screen where you can browse the latest releases.

To change the default currency:

1. Touch the  button at the top right of the screen, then choose “Settings”.
2. Scroll down the list until you find the “General” section, and touch “Country”.
3. Choose your preferred country from the list on screen. The currency displayed on the 7digital store will change to match.

NOTE

For support and further information on the 7digital music service, please visit <http://www.7digital.com>.

WILD TANGENT GAMES SERVICE

WildTangent provides a gaming service for Scroll Engage where users can trial, rent or own top games, based on WildCoins. WildCoins are a digital currency which can be purchased in packs or as a subscription. Users can also play for free in exchange for viewing an advert from a brand advertiser.



The WildTangent Games application is pre-loaded on Scroll Engage. See section “12.5 – Pre-Loaded Applications” (page 18) for instructions on how to install.

To use WildTangent:


1. Open the WildTangent Games application from the Applications menu.
2. Sign into your account, or if you do not have one, select the “Create an account” option. Follow the on-screen instructions to create an account.
3. The main interface will launch and automatically show the latest games. Browse the featured games on this page, or touch the “Find Games” button to search for a specific type of game.
4. Touch a game’s icon to view details.



The “My Games” tab shows all games currently installed on Scroll Engage. Touch a game’s icon to launch it.

Touch and hold a game icon to open a sub menu with the following options:

- **Play** to launch the game
- **Uninstall** to remove the game from Scroll Engage
- **Stop Renting** if you wish to discontinue renting (if applicable)

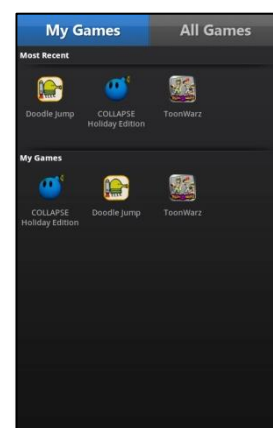

TIP

Games installed via the WildTangent application will also be available to launch from Scroll Engage’s own Applications menu.

While in the WildTangent application, press the  button to launch the context menu for further options.

NOTE


For support and further information on WildTangent, please visit <http://www.wildtangent.com>.

BUILT-IN CAMERAS

The Camera application lets you take photographs and record video clips using the built-in cameras.



- Launch the “Camera” application from the Applications menu by touching the Camera icon:

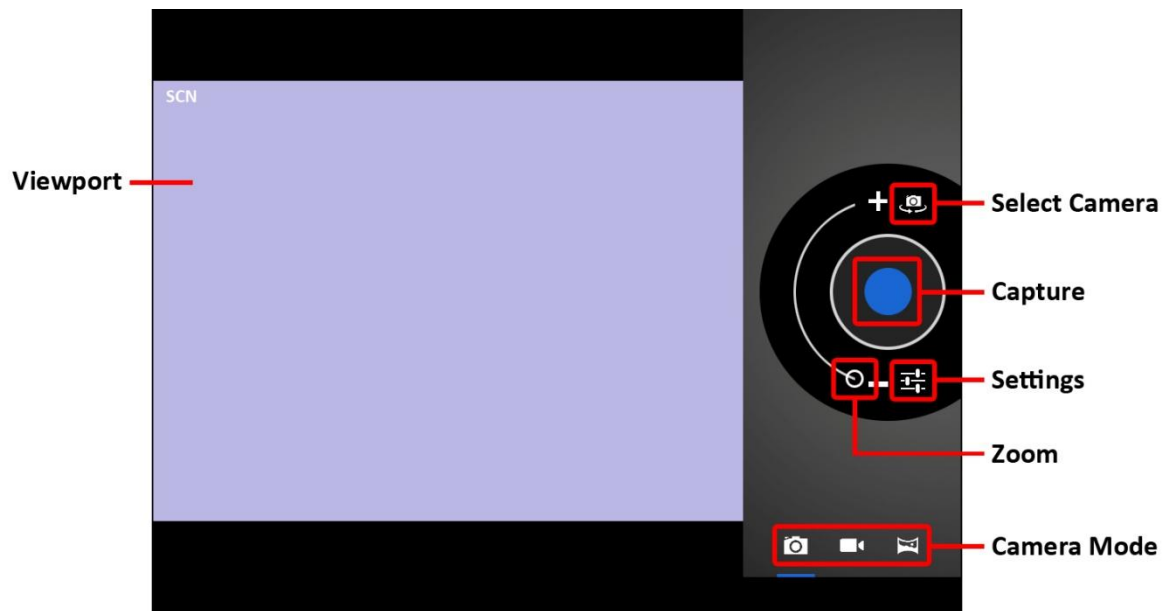

- Touch  to switch between the front and rear cameras.
- Use the Viewport to align the scene you would like to capture.
- Slide the Zoom indicator along its track to zoom in or out.
- Touch  to change white balance, exposure and other settings.
- Touch the Capture button to record.

There are three camera modes:

ICON	CAPTURE BUTTON	DESCRIPTION
		Still picture mode
		Video recording mode
		Panoramic still mode – capture very wide photographs

MEMORY EXPANSION WITH MICRO SD CARD

Scroll Engage features built-in flash memory, which can be expanded using a Micro SD card (not included). You may use any Micro SD or Micro SDHC card, up to 32GB capacity.

The best way to use a Micro SD card is to treat it as media storage; transfer media files (videos, music and photos) from your computer to your Micro SD card in the usual manner, then insert it into Scroll Engage as shown:

To insert and use a Micro SD card:


1. Push the Micro SD card into the slot indicated in the diagram below, until it clicks and locks in place.
2. Scroll Engage will automatically mount the Micro SD card for use.



To eject a Micro SD card:

- Push the Micro SD card inwards slightly until it clicks, then release pressure. It will pop out from the socket.

It is recommended to organise your Micro SD card by creating folders for different media types in the root:

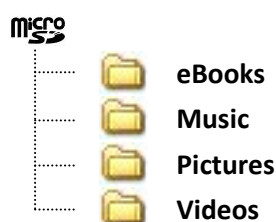

Place your media files in the respective folders. This may help if you need to instruct an application where to look for media files.

NOTE

For third party applications you may need to point them to the Micro SD card to read your media files. Refer to the instructions specific to each application for directions on how to do this.

CONNECT TO A COMPUTER


Scroll Engage can be connected to a computer running Microsoft Windows for file transfer via USB cable.

To connect to a computer:

1. Using the supplied USB cable, plug the micro USB connector into Scroll Engage's USB socket, and plug the full-size USB plug into an available USB socket on your computer.



2. Windows may present you with a "New Hardware Wizard". Please click the "Cancel" option to close this.
3. On Scroll Engage, touch the status bar at the bottom of the screen.
4. Touch the "USB connected" option, then choose "Turn on USB storage".

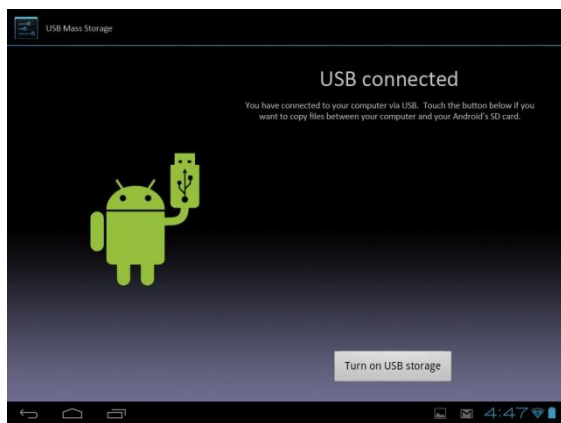

Scroll will appear as mass storage on your computer and will be assigned the next available drive letter within "My Computer" or "Windows Explorer".

Drag and drop files from your computer's storage drives onto Scroll Engage, just like you would with any other external storage device.

It is recommend to organise your media files into separate folders for each type, e.g. ebooks, music, pictures and videos.

To disconnect from a computer:

1. Touch the "Turn off USB storage" button to un-mount the flash memory.
2. Disconnect the USB cable.

NOTE

Failure to un-mount the flash memory could prevent Android™ applications from being able to access the memory, and cause erratic behaviour. Always un-mount before disconnecting the USB cable.

SYSTEM RESET



A system reset allows you to return the tablet back to factory default settings.

CAUTION

Resetting to factory defaults will erase all data from the tablet's internal storage. You *must* do a back up of any important data *before* performing this procedure.

To reset your tablet to factory defaults:

1. Touch the “Settings”  menu icon on the Applications menu. The Settings menu will open.
2. Scroll down to the “ Backup & reset” menu item, and touch to select it.

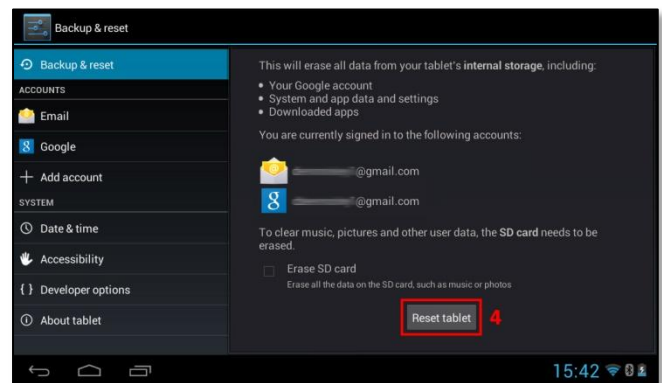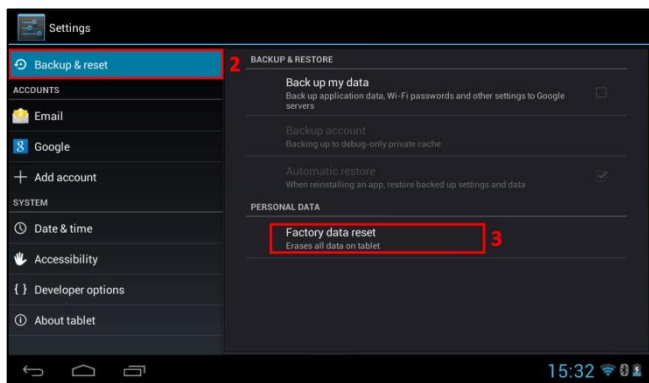

3. Select “Factory data reset”. Android will warn you that you are about to erase everything on the tablet's internal storage, including:
 - Your Google account
 - System and application data and settings
 - Downloaded applications

A note states “To clear music, pictures and other user data, the SD card needs to be erased”; this message is referring to the internal memory (virtual SD card) on your tablet. It *does not* mean an inserted Micro SD card!

Selecting this option is not advisable as it will *delete the pre-loaded Scroll Apps* from the tablet, meaning you will not be able to reinstall them once the tablet has been reset. If you are sure you want to erase the internal memory (virtual SD card), please make a backup of the “Scroll Apps” folder (either to Micro SD card or your computer) first.

4. Select the “Reset tablet” option. Android will ask you if you are sure; touch the “Erase everything” button to confirm this. The tablet will shut down, perform the reset procedure, and then reboot.

NOTE

The reset procedure may take some time. Once the procedure is complete, the tablet will take longer to reboot than before. This is normal, and will only happen for the first boot after resetting the tablet.

PRODUCT SPECIFICATION

Scroll Engage	
	
Hardware	
Unit Size (mm):	200 x 153 x 10
Unit Weight:	395g
CPU:	Cortex 1.2GHz
GPU:	Dual Mali 400 graphics processor
RAM:	1 GB
Built-in Storage:	8 GB
Storage Expansion:	Micro SD card, up to 32 GB
Display:	8" High Resolution, Capacitive touch
Resolution:	1024 x 768, 4:3
Battery Type:	Rechargeable lithium
Battery Capacity:	4200 mAh
USB Port:	1x Micro USB
Connectivity:	1x Mini HDMI , 1x Headphones, 1x MicroSD
Speaker:	8 Ω / 1W
Wireless Connectivity:	802.11b/g/n
Software	
Operating System:	Android™ 4.0
Web Browser:	Pre-installed
Video Support:	AVI, H.264, MPEG2, MPEG4, MKV, MP4 Supports 1080p 3D video output
Audio Support:	MP3, AAC, AC3, WAV
Photo Support:	JPEG, BMP, GIF, PNG, TIFF
3D Gaming:	OpenGL rendering

WARRANTY AND PRODUCT SUPPORT

If you are experiencing difficulties with your product, or have questions which are not answered in this instruction manual, our dedicated support site offers a wide range of clearly written FAQs, manuals and user guides which are designed to help you get the most from your purchase.



Visit our dedicated support site at storageoptions.com/support/ for FAQs, manuals and user guides

If you are unable to find an answer online, still experiencing issues or suspect your product to be faulty, our UK based customer service team is available to offer full support, and can be contacted via the support pages of our website.



Submit a service request online if you cannot find an answer to your problem



A member of our **UK based support team** will review your case and offer the highest level of advice and support

If our team believes that the product in question is faulty, we will issue a returns authorisation and arrange for a replacement to be sent free of charge.*



Return the product free of charge* – a pre-paid shipping label will be issued to return the product



Within 5 to 10 days a replacement product will be sent at no charge to you



Replacement product delivered directly to you

Please contact us directly if you have any queries or concerns:



storageoptions.com/support/



support@storageoptions.com

Our aim is to provide the best possible service to our customers. We have a wealth of support material, guides and FAQs available on our website to help you get the most from your product. Our dedicated UK based Customer Service team are also on hand to offer further support and, in the unlikely event of any fault developing with your purchase, we have a full returns procedure designed to make receiving a replacement product as quick and easy as possible.

*Free replacement service applies to UK Mainland (excluding Scottish Highlands) only. Storage Options reserves the right to charge for delivery to, or collection from, other locations.

NOTES

Scroll Engage

by **Storage** Options



Storage Options Scroll Engage

Made in China